

Safe Operating Instructions

Always wear eye
protection, gloves
& footwear



1. Place your foot on the footplate

1



2

2. Raise the handle and position the lifter against the post ensuring the jaws sit snugly around a single fin

3. Hold the handle as close to the end of the handle as possible for best leverage

3



4

4. Lower the handle to lift the post, subsequently raising & lowering the handle to remove the post

Handy Tip: If your post is stubbornly difficult to remove, try hitting it into the ground a couple of times with a post driver to loosen the soil around it

Safety Tip: With your free hand, grab hold of the post (or have a second person hold the post if you don't feel confident) before it comes out of the ground, to avoid it hitting a person or object. As a general rule, grab the post when you feel the post coming loose before it is fully extracted.

Maintenance:

Keep moving parts clean and lubricate at 6-monthly intervals with a Lanolin-based spray like Woolube

Check handle and jaw operation	• Raise & lower the handle, check for smooth unhindered movement of both handle and jaws • Check that jaws are open in the raised position, and closed (jaw teeth are touching) when lowered
Visually inspect components	• Dislodge any debris (soil, grass, tar, timber picket splinters) with a brush and /or WD spray • Look for any loose or damaged fasteners • Look for any damage to welds that may cause a break in the unit • Repair or replace as needed

GRIP'N'LIFT CONTRACTOR POST LIFTER

SAFE OPERATING PROCEDURE

12207

Always wear eye
protection, gloves
& footwear



1. Place your foot on the footplate



2. Raise the handle and position the lifter against the post ensuring the jaws sit snugly around a single fin



3. Hold the handle as close to the end of the handle as possible for best leverage



4. Lower the handle to lift the post, subsequently raising & lowering the handle to remove the post



Safety Tip:

With your free hand, grab hold of the post (or have a mate hold the post if you need) before it comes out of the ground. This avoids the post hitting a person or nearby object. As a general rule, grab the post when you feel the post coming loose before it is fully extracted.

Handy Tip:

If the post has been there for a while, and is difficult to remove; try hitting it into the ground a couple of times with a post driver like the White Rural Contractor Post Drive to loosen the soil around it.



12209

Maintenance: Keep moving parts clean and lubricate every six months.

Check handle and jaw operation	• Raise & lower the handle, check for smooth unhindered movement of both handle and jaws • Check that jaws are open in the raised position, and closed (jaw teeth are touching) when lowered
Visually inspect components	• Dislodge any debris (soil, grass, tar, timber picket splinters) with a brush and /or WD spray • Look for any loose or damaged fasteners • Look for any damage to welds that may cause a break in the unit • Repair or replace as needed